




Installation Instructions

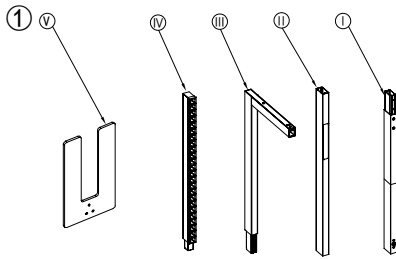


Screw A		AX3
Screw B		BX4
Screw C		CX3
Hexagonal screwdriver		X1

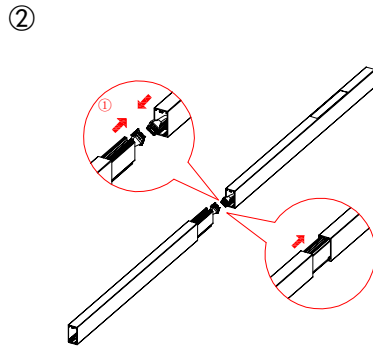


1. Open the package and take out all parts of the floor lamp
2. Take out the light pole and connect the terminals in the middle of the light pole according to step ① in the picture.
3. Connect the light pole as shown in step ②

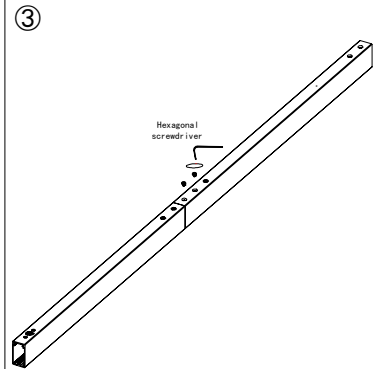


Tighten screw B using a hexagonal screwdriver as shown in the figure.

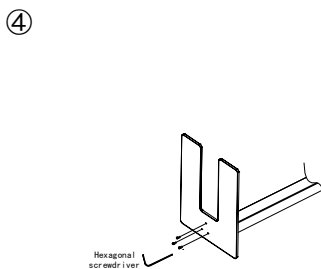


1. Take out the base, place the base properly to prevent it from falling and causing personal injury;
2. Take out screw A from the accessory bag and use screw A to connect the light pole and the base, as shown in the figure
3. use hexagonal screwdriver B to tighten the base.

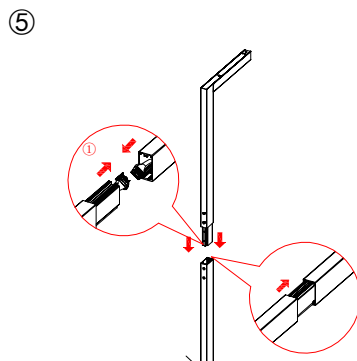


- ◆1. Open the package and take out all parts of the floor lamp
2. Take out the light pole and connect the terminals in the middle of the light pole according to step ① in the picture.
3. Connect the light pole as shown in step ②

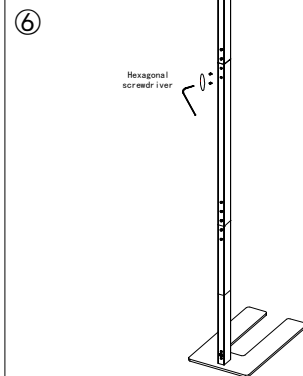


Use B screws and tighten with a hexagonal screwdriver as shown in the figure.

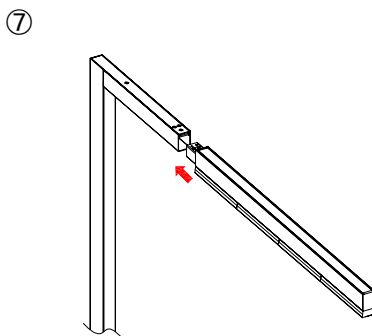

- ◆ Insert the lamp head with lens into the opening of the L-shaped lamp pole as shown in the figure.

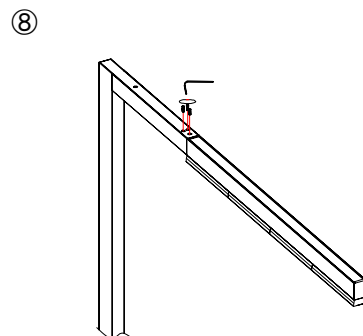


- ◆ Use screw C and a hexagonal screwdriver to connect the lamp head to the L-shaped lamp pole..

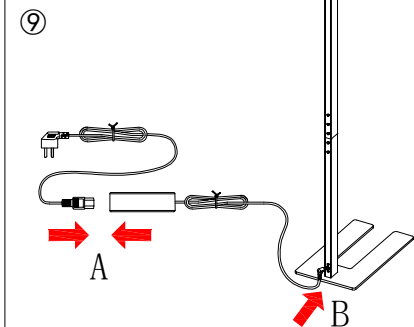

1. Connect the power cord to the power source and ensure effective connection, as shown in Figure A
2. Insert the cable into the light pole socket as shown in the figure and ensure effective connection, as shown in Figure B

⑩

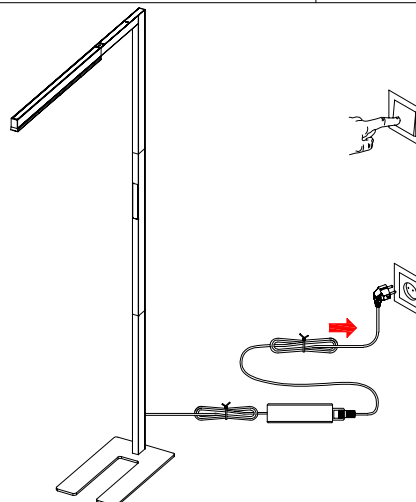

⚠ Warning! Improper power connection. There is a possibility of electric shock, resulting in a fatal risk.
◆ Make sure the connected power supply has a ground protection.

⚠ Warning! Electrical parts are exposed. There is a risk of electric shock, resulting in a fatal risk.
◆ Please make sure the light fixture is fully installed before connecting to power.
Note: If the power supply voltage is wrong, it may cause material damage and cause the lamp to be damaged or destroyed.
◆ Make sure the power supply voltage is consistent with the rated voltage and frequency of the lamp.